

# ZESTRON® Bath Analyzer 10

## Area of application for the ZESTRON® Bath Analyzer 10



In order to achieve consistent cleaning results, the user has to ensure that the actual concentration of the cleaning agent stays within the recommended application range. Various factors such as "drag-out," dilution and evaporation can potentially influence the actual concentration. Regular measurements of all process related parameters are therefore highly recommended. The ZESTRON® Bath Analyzer 10 is a simple, easy to use method that provides reliable and accurate results for fresh and contaminated cleaning baths.

### Simple measurement in only a few steps:


#### ① Sampling / Decanting



#### ② Adding test solution



#### ③ Shaking / Evaluating

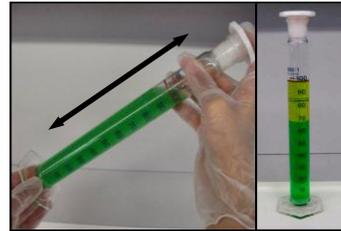

### Advantages of the ZESTRON® Bath Analyzer 10:

- Very precise concentration measurement:
  - even for increasing contamination levels
  - for fresh as well as for contaminated cleaning baths
- Provides evidence of alkalinity via color change
- Simple and fast procedure
- Requires little space with minimal investment

### Specifically developed for the following cleaning agents:

- ATRON® AC 200
- ATRON® AC 205
- ATRON® AC 300
- ATRON® AC 207
- VIGON® PM 101
- VIGON® A 200
- VIGON® A 201
- VIGON® A 250
- VIGON® US

### The ZESTRON® Bath Analyzer 10 includes:



- 1) PE bottle with injection nozzle
- 2) 2 pairs of vinyl gloves
- 3) Digital thermometer (°C/°F)
- 4) Sampling beaker for taking a bath sample
- 5) Glass cylinder with marking
- 6) 6 x 100 mL ZESTRON® Bath Analyzer 10 test solution
- 7) Manual, including correlation charts (not illustrated)

### To place an order:

Part No.	Product Description
0400-0000	<b>ZESTRON® Bath Analyzer 10</b> Portable case
0401-0100	<b>ZESTRON® Bath Analyzer 10</b> 6x 100 mL Refill bottles in carton

ZESTRON America  
11285 Assett Loop  
Manassas, VA 20109 USA  
Phone: +1 (703) 393-9880  
Fax: +1 (703) 393-8618  
infousa@zestron.com

For further technical questions about the ZESTRON® Bath Analyzer 10, contact  
ZESTRON America's Application Department:  
Phone: (703) 393-9880 Email: infousa@zestron.com